

andrewJames

6 Day Pet Feeder



Please read the manual fully before using the appliance and keep the manual safe for future reference.

Contents page

Features	Page 3
Control panel keys	Page 3
Appliance components illustration	Page 4
Getting started	Page 5
Disassemble and Assembling the appliance	Page 6
General operation	
Filling the bowl with food	Page 7
Setting the current clock time	Page 7
Setting the feeding time	Page 7
Review and starting the feeding timer	Page 8
Record voice message	Page 8
Playback voice message	Page 9
Battery replacement	Page 9
Notes & FAQ'S	Page 10
UK & EU Guarantee	Page 11
Contact details	Page 12


Features

- 12 or 24 hour clock display.
- 6 second personal voice message recorder.
- Personal voice message recorder.
- Food bowl rotates according to your set time.
- 6 feeding times can be set for any time of the day or night.
- C size alkaline batteries (4pcs required) last for over 1 year.
- Red LED indicates batteries need to be changed.

Control Panel Keys

- **MODE**– switches between clock or feeding time display. Also increases clock time during clock/feeding time set mode.
- **SET**– enters settings mode. Also confirms the time you enter and advances to the next setting.
- **START NOW**– starts the feeding timer immediately.
- **START TOMORROW**- Starts the feeding timer the next day.
- **REC**– records your personal voice message.
- **PLAY**– plays back your recorded voice message.
- **ON SWITCH**– turns the feeder on/ off. Press when the feeder will not be used for an extended period of time. Turning the switch off will reset all time and feeding settings.

Appliance components Illustration

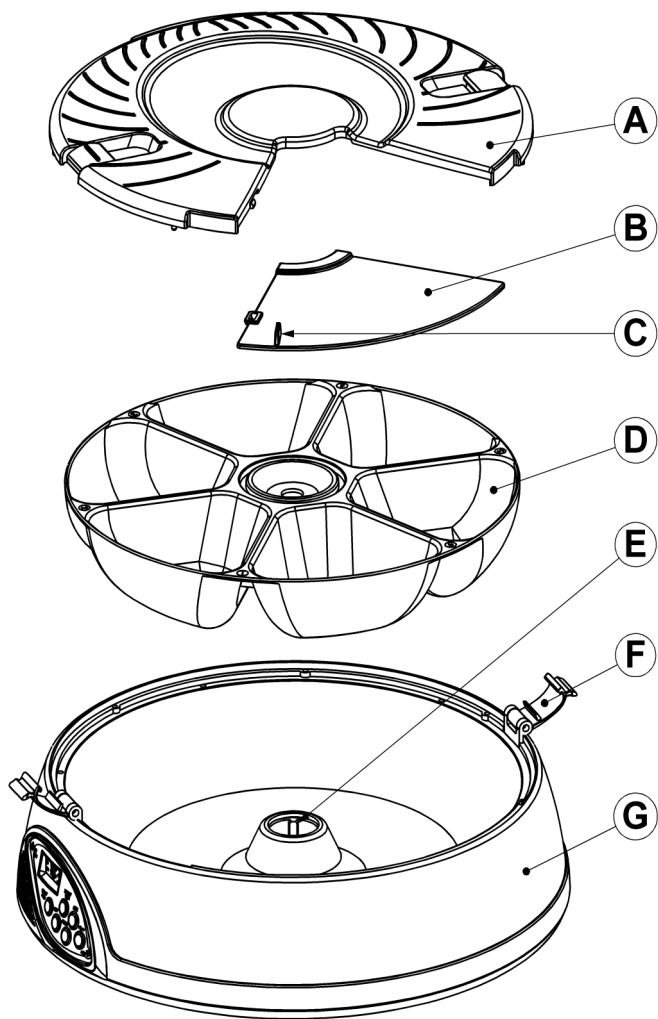

A. Lid	E. Base locking system
B. Slide cover	F. Locks
C. Slide cover protrusion	G. Base
D. Feeder base	

Getting started

1. Carefully turn the pet feeder upside down. Remove both battery doors by squeezing the two tabs and gently pulling each door away.
2. Keep the ON switch set to OFF.
3. Insert four C size alkaline batteries into the battery tray. DO NOT use old or cheap carbon batteries.
4. Close the battery doors, rotate the feeder right-side up and switch it **ON**.
5. The feeder will cycle once until “12:00” becomes displayed the LCD screen.



Please note: Your pet feeder makes the food available in the order of Tray 1-6.

When you only want one tray of food only fill tray 1, for two feeds tray 1 and 2 and so on.

Disassemble

The appliance should already come fully assembled.

1. Unlock both locks (F) by pressing down on the locks and lifting them up.
2. Remove the lid “A” from the appliance.
3. Remove the slide cover “B”.
4. Remove the feeder base “D”.

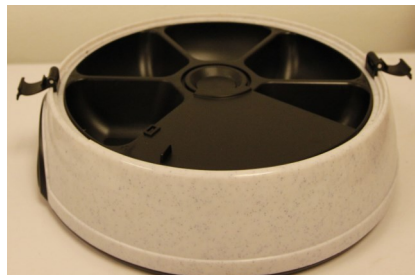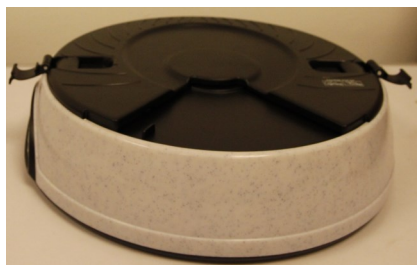

Re-Assembling the appliance

1. Place the feeder base “D” into the base of the appliance “G” so that it aligns and fits correctly with the base locking system “E”.
2. Fit the slide cover “B” into the appliance.
3. Align the lid (A) with the locks (F) and secure the locks by pushing them downwards.

General Operation

Filling the bowl with Food


1. Disassemble the appliance according the section “Disassemble”.
2. Fill the feeder base (D) trays 1-6 with food.
3. Re-assemble the appliance according to the sections “Re-assembling the appliance”

Setting the current Clock Time

1. During Clock display mode, **press and hold** the **SET** key for (2 seconds) to enter Clock SET mode. The hour number will now be blinking.
2. Press the **MODE** key to increase the hour. Once you have set the hour, press the **SET** key to confirm the hour. The minute number will now blink.
3. To change the minute number, press the **MODE** key to increase the minute. Once you have set the minute, press the **SET** key to confirm the minute. Both the hour and minute numbers will now blink.
4. If needed, Press the **MODE** key to change between 12 or 24 hour time.
5. Press the **SET** key to confirm your current time setting and the numbers will stop blinking.

Setting the Feeding Time

1. After setting the clock time, press the **MODE** key one time. (1 1) will show on the display. This is feeding time display mode.
2. Now **press and hold** the **SET** key for (2 seconds) to enter Feeding-time SET mode. Feeding will start from the first feeding number & time. The 1st digit represents the feeding number (**Food Tray 1**)
3. The hour digits will now blink (2nd and 3rd digit). Press the **MODE** key to increase the time, then press the **SET** key to confirm the time you set.
4. After confirming the 1st feeding time, the next feeding number & time will show on the display. (1st digit will change to the next feeding number, e.g. Food Tray 2 or 3 or 4 or 5 or 6 and back to 1) **To change the feeding time, repeat step 3.**
5. Repeat step 3 until all 6 feeding times for each Food Tray are set. The display will change back to clock display mode when all 6 feedings have been set.

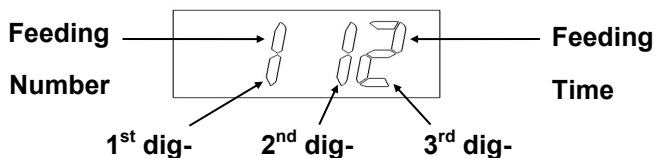

Program examples:

- Feed once a day at 13:00hr (24hrs display) and feed for 6 days.
- Feed time 1 & 2 & 3 & 4 & 5 & 6 all equal = 13:00hr.
- Feed twice a day at 10:00 and 20:00 and feed for three days.
- Feed time 1 = 10, feed time 2 = 20, feed time 3 = 10, feed time 4 = 20, feed time 5 = 10 and the last time 6 = 20.
- Feed three times a day at 6:00am, 12:00 and 18:00 (6:00pm).
- Feed time 1 = 06, feed time 2 = 12, feed time 3 = 18 and so on...

Review and Starting the feeding timer

1. Use the **MODE** key to cycle through clock and your set feeding times (clock - then 1st feed time→2nd feed time→3rd feed time→4th feed time→5th feed time→6th feed time→ back to clock...) The sequence will repeat.
2. Press the **START NOW** key to start the feeding timer immediately. The bowl will rotate to the pre-set starting position (Tray 6) and your recorded message will play once. The **BELL** icon will now be **On**.
3. Or press the **START TOMORROW** key and the feeding timer will start at 0:00-Midnight. The bowl will rotate to the pre-set starting position (Tray 6) and your recorded message will play once. The **BELL** and **Zz** icon will now be **On**.

Display Mode (to check Feeding times you have set)

- Use the **MODE** key to cycle through clock and feeding settings (clock - then 1st feed time→2nd feed time→3rd feed time→4th feed time→5th feed time→6th feed time→ back to clock...) The sequence will repeat.

Record Voice Message to be played at feeding times

- Press and hold the **REC** key, the Red LED will turn on.
- Speak your message. You have up to 20 seconds.
- When finished release the REC key.

Play back recorded Voice Message

- Press the PLAY key.
- Your recorded message will now play.
- At each Feeding your recorded message will play back 3 times.

Battery Replacement

- Change all batteries when the Red LED (Low battery indicator) flashes. Use only new Alkaline batteries.

Notes & FAQ:

- When the bowl is rotating both the clock setting and mode setting are not allowed.
- Under clock display mode the colon icon (:) will flash. The colon icon (:) is turned **Off** when in feeding timer mode.
- A **PM** icon will be displayed in the afternoon under 12-hour clock mode and turned off in the AM. The **PM** icon will not be displayed under 24 hour clock mode.
- In feeding timer mode, three numbers will show up, the first number is the feeding number (1,2,3,4,5 or 6) and last two digits indicate the feeding time in hours.
- When the feeding timer starts, the BELL icon will turn On. Under feeding-timer display mode a solid BELL icon means the feeding time has already passed. A flashing BELL icon means the feeding time has not been reached. This lets the user know how many feedings are left for feeding.
- If the time for the next feeding is set earlier than the present feeding time, the feeding will start the next day.
- If the **Mode** key is pressed and held for more than 2 seconds the number will rapidly increase automatically until you release the key. When number reaches its maximum, the number will fall back to the minimum value and start increasing again.
- If the feeding timer has already begun, pressing the **START** key will reset the timer and begin again from the 1st feeding-time set.
- If **START TOMORROW** key is pressed, both the **BELL** and **Zz** icon will be **ON**. The **Zz** icon will turn **OFF** at 0:00 midnight to indicate the timer has started.
- **START TOMORROW** is used should you want to set your feeder up today and have it start tomorrow. This is good for when you have programmed feeding times that have yet to pass so you can prepare in advance for a possible trip or just being away the next day and not wanting the feeder to run the day you programmed it.

UK and EU Guarantee

Your new Andrew James product comes with a 24 month guarantee and a 2 year fixed warranty, effective from receipt confirmation. Your receipt or order number is required as proof of purchase date so it is imperative that you keep it safe. This guarantee only applies if the item has been used solely for the use intended, and all instructions have been followed accordingly. Please note this product is only for domestic not commercial use.

Abuse of your product will invalidate the guarantee. Returned goods can only be accepted if repackaged properly within the original colour product box, and presented with the original receipt of sale/order number. This does not affect your statutory rights.

Returned products must be cleaned and returned to us in as close to delivery condition as possible.

If your product develops a problem within the first 12 months of the fixed warranty, we will pay all shipping costs to have it returned to us. After 12 months the customer will be liable for the cost of returning the product to us. We will then pay to have the repaired/replaced item shipped back to the customer.

If you wish to return your item for a full refund, you have the right to do so within the first 7 days. For our returns policy please go to www.andrewjamesworldwide.com

Customers are responsible for any taxes applied to our products when they are shipped outside of the EU.

All of our prices are inclusive of VAT.

Once a product has been returned to us, we will aim to repair or replace it within 30 days of receipt.

The guarantee does not cover any defect arising from improper use, damage, build-up of lime scale or repair attempts made by third-parties. Also, the guarantee does not cover normal wear and tear of individual parts.